

Rotary actuator fail-safe for adjusting dampers in technical building installations

- Air damper size up to approx. 4 m²
- Torque motor 20 Nm
- Nominal voltage AC 230 V
- Control Open/close
- with 2 integrated auxiliary switches



Technical data

Electrical data



Nominal voltage	AC 230 V
Nominal voltage frequency	50/60 Hz
Nominal voltage range	AC 198264 V
Power consumption in operation	6.5 W
Power consumption in rest position	3.5 W
Power consumption for wire sizing	18 VA
Auxiliary switch	2 x SPDT, 1 x 10% / 1 x 1190%
Switching capacity auxiliary switch	1 mA3 A (0.5 A inductive), AC 250 V
Connection supply / control	Cable 1 m, 2 x 0.75 mm ²
Connection auxiliary switch	Cable 1 m, 6 x 0.75 mm ²
Parallel operation	Yes (note the performance data)

Functional data

Torque motor	20 Nm
Torque fail-safe	20 Nm
Direction of motion motor	selectable by mounting L/R
Direction of motion fail-safe	selectable by mounting L/R
Manual override	by means of hand crank and locking switch
Angle of rotation	Max. 95°
Angle of rotation note	adjustable starting at 33% in 2.5% steps (with mechanical end stop)
Running time motor	75 s / 90°
Running time fail-safe	<20 s / 90° <20 s @ -2050°C / <60 s @ -30°C
Sound power level, motor	45 dB(A)
Mechanical interface	Universal shaft clamp 1025.4 mm
Position indication	Mechanical
Service life	Min. 60'000 fail-safe positions

Safety data

Protection class IEC/EN	II, reinforced insulation
Protection class UL	II, reinforced insulation
Protection class auxiliary switch IEC/EN	II, reinforced insulation
Degree of protection IEC/EN	IP54
Degree of protection NEMA/UL	NEMA 2
Enclosure	UL Enclosure Type 2
EMC	CE according to 2014/30/EU
Low voltage directive	CE according to 2014/35/EU
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
Certification UL	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case



	Technical data sheet	SF230A-S2
Safety data	Mode of operation	Type 1.AA.B
	Rated impulse voltage supply / control	4 kV
	Rated impulse voltage auxiliary switch	2.5 kV
	Pollution degree	3
	Ambient temperature	-3050°C
	Storage temperature	-4080°C
	Ambient humidity	Max. 95% RH, non-condensing
	Servicing	maintenance-free

Safety notes



Weight

Weight

• The device must not be used outside the specified field of application, especially not in aircraft or in any other airborne means of transport.

2.3 kg

- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
 aggressive gases interfere directly with the device and that it is ensured that the ambient
 conditions remain within the thresholds according to the data sheet at any time.
- · Caution: Power supply voltage!
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- To calculate the torque required, the specifications supplied by the damper manufacturers concerning the cross-section, the design, the installation site and the ventilation conditions must be observed.
- The two switches integrated in the actuator are to be operated either on power supply voltage
 or at safety extra-low voltage. The combination power supply voltage/safety extra-low voltage
 is not permitted.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Mode of operation The actuator moves the damper to the operating position at the same time as tensioning the return spring. The damper is turned back to the fail-safe position by spring force when the

supply voltage is interrupted.

Simple direct mounting Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an anti-

rotation device to prevent the actuator from rotating.

Manual override By using the hand crank the damper can be actuated manually and engaged with the locking

switch at any position. Unlocking is carried out manually or automatically by applying the

operating voltage.

Adjustable angle of rotation Adjustable angle of rotation with mechanical end stops.

High functional reliability The actuator is overload protected, requires no limit switches and automatically stops when the

end stop is reached.

Flexible signalling The actuator has one auxiliary switch with a fixed setting and one adjustable auxiliary switch.

They permit a 10% or 11...90% angle of rotation to be signaled.

Accessories

Electrical accessories	Description	Туре
	Feedback potentiometer 1 kΩ	P1000A-F
	Feedback potentiometer 200 Ω	P200A-F
	Auxiliary switch 2 x SPDT	S2A-F



Technical data sheet SF230A-S2

Mechanical accessories

Description	Туре
Shaft extension 240 mm Ø20 mm for damper shaft Ø 822.7 mm	AV8-25
End stop indicator	IND-AFB
Shaft clamp reversible, for central mounting, for damper shafts Ø12.7 /	K7-2
19.0 / 25.4 mm	
Ball joint suitable for damper crank arm KH8 / KH10	KG10A
Ball joint suitable for damper crank arm KH8	KG8
Actuator arm, for 3/4" shafts, clamping range Ø1022 mm, Slot width 8.2	KH-AFB
mm	
Damper crank arm Slot width 8.2 mm, clamping range Ø1018 mm	KH8
Anti-rotation mechanism 230 mm, Multipack 20 pcs.	Z-ARS230L
Base plate extension	Z-SF
Form fit insert 10x10 mm, Multipack 20 pcs.	ZF10-NSA-F
Form fit insert 12x12 mm, Multipack 20 pcs.	ZF12-NSA-F
Form fit insert 15x15 mm, Multipack 20 pcs.	ZF15-NSA-F
Form fit insert 16x16 mm, Multipack 20 pcs.	ZF16-NSA-F
Mounting kit for linkage operation for flat and side installation	ZG-AFB
Hand crank 63 mm	ZKN2-B

Electrical installation




Caution: Power supply voltage!

Parallel connection of other actuators possible. Observe the performance data.

BEHT

Wiring diagrams

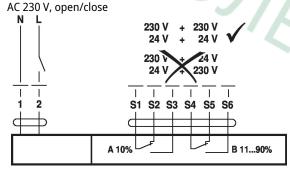

Cable colours:

1 = blue 2 = brown S1 = violet S2 = red


S3 = white S4 = orange S5 = pink

S6 = grey



Operating controls and indicators

Auxiliary switch settings

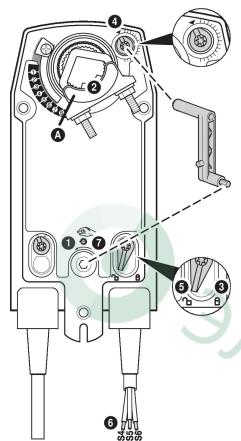



Note: Perform settings on the actuator only in deenergised state.

Manual override

Turn the hand crank until the desired switching position is set.

2 Spindle clamp

Edge line (A) displays the desired switching position of the actuator on the scale.

3 Fasten the locking device

Turn the locking switch to the "Locked padlock" symbol.

4 Auxiliary switch

Turn rotary knob until the notch points to the arrow symbol.

5 Unlock the locking device

Turn the locking switch to the "Unlocked padlock" symbol or unlock with the hand crank.

6 Cable


Connect continuity tester to S4 + S5 or to S4 + S6.

Manual override

Turn the hand crank until the desired switching position is set and check whether the continuity tester shows the switching point.

Dimensions

Dimensional drawings

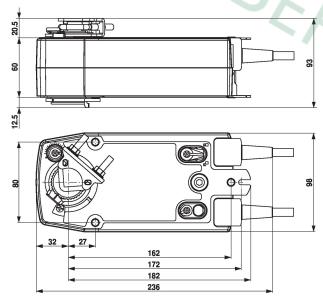

Clamping range

<u>OI</u>			
1022	10		1425.4
OI.		I	
1925.4		1218	



Shaft length






Min. 85



Min. 15

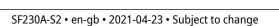

3/7EKTPOBEHY